



1. Location of meter base shall be determined by a representative of Pioneer Electric Cooperative.
2. Pioneer can furnish the required meter base. Charges may apply for the meter base.
3. Member or Contractor shall mount the meter base and furnish all material and labor for the installation beyond the "Point of Delivery."
4. Member or Contractor is required to install a Conduit System including an expansion joint/slip meter base riser per specifications in the Guideline Checklist.
5. Entrance cable and Service conductors shall have an ampacity equivalent to the Main disconnect.
6. The Main disconnect shall be at a readily accessible location either outside the building, or inside the nearest point of entry of the service conductors.
7. Equipment and Service conductors shall have a clearance of not less than 3 feet from gas/propane installations and equipment.
8. Meter base must be installed on the outside of the building and kept clear and accessible to Cooperative employees at all times.
9. Approved and released by local regulatory agency before permanent connections.

<b>PIONEER RURAL ELECTIC CO-OP., INC.</b> <b>PIQUA, OHIO 45356</b>		
<b>100 Amp, 200 Amp, 320 Amp</b> <b>Underground Service Attached</b> <b>To Building</b>		
Oct. 2004	Rev. 3/2010	PRE 3