



1. Location of the meter base shall be determined by a representative of Pioneer Electric Cooperative.
2. Pioneer can furnish the required meter base. Charges may apply for the meter base.
3. Member or Contractor shall mount the meter base and furnish all material and labor for the installation beyond the "Point of Delivery."
4. Member or Contractor is required to install a Conduit System including an expansion joint/slip meter riser per specifications in the Guideline Checklist.
5. All disconnects and enclosures must be grounded.
6. Equipment and Service conductors shall have a clearance of not less than 3 feet from gas/propane installations and equipment.
7. Meter base must be kept clear and accessible to Cooperative employees at all times.
8. Approved and released by local regulatory agency before permanent connections.

PIONEER RURAL ELECTRICAL CO-OP., INC.
PIQUA, OHIO 45356

**320 Amp Underground Service
For Service To Detached
Outbuildings**

Oct. 2004

Rev. 3/2010

PRE 6